



Application method

Intensive cleaning (mechanical wet cleaning)

Intensive cleaning means thorough interim cleaning; either to care for coated floorings, to remove films left by maintenance cleaners or to get rid of construction dirt from floorings following construction work.



 
Step 1: Preparation

Stack furniture where necessary. Sweep or use a damp cloth (gauze cloth) to remove coarse, loose dirt.



Step 2: Dose, prepare ready-to-use solution

First add water, then add the correct amount of detergent, following the dosage instructions on the label. Always use cold water!









Step 3: Scrub the floor area using a machine

Use a red pad and rotary floor machine to scrub the floor in even, overlapping strokes. Add cleaning solution from the tank. Turn over or replace dirty pads with new ones. A scrubber drier can be used on large surfaces.



The safety advice and instructions for use on the containers, the product information and the safety data sheet must be observed. Please also observe the cleaning and maintenance recommendations of the manufacturers as well as the instruction manual of the machines and equipment used.





Application method

Intensive cleaning (mechanical wet cleaning)



Step 4: Clean the edges

Edges, corners, rims and other areas inaccessible to the machine need to be manually treated using a hand pad and an edge-cleaning device. Stubborn encrusted dirt may need to be removed with a spatula.



Step 5: Remove the dirty solution

Use a squeegee and wet vacuum cleaner to remove the dirty solution. Always use a wet vacuum cleaner for highly absorbent floorings and structured surfaces. Do not allow the dirty solution to dry!

Tip!

In case of excessive foam build-up, simply add a few squirts of defoamer into the suction hose of the wet vacuum cleaner when switched on.



Step 6: One-step cleaning

Systematically wipe the surface with clean water and a flat mop.







Application method

Intensive cleaning (mechanical wet cleaning)



Step 7: Clean the devices

Rinse the wet vacuum cleaner, rotary floor machine, bucket etc. and clean inside and out with a cloth. Clean the cable with a cloth and check for damage.