



Application method

Initial and re-oiling (impregnating) with Kiehl-Basic-OilX

Impregnating oils penetrate deep into the surface of parquet flooring, highlight the colour of the wood and help to retain a natural look. Impregnating oiling is suitable for both the initial oiling of untreated wooden surfaces and for the re-oiling of parquet flooring to which an impregnating oil finish has already been applied. Before applying Kiehl-Basic-Oil, the surfaces must be properly prepared by dry cleaning. The surface cannot be walked on during the curing time and must not be mopped.

Curing time:

Initial oiling: 2–3 days

Re-oiling: approx. 24 hours



Step 1: Dry cleaning

Prior to treating the floor with Kiehl-Basic-Oil, the surface must be dry cleaned and prepared for the maintenance product.



Step 2: Protect nearby floor areas

Cover nearby floor areas, furniture, equipment, cable ducts etc. with foil and affix with water-resistant, residue-free, removable adhesive tape.



The safety advice and instructions for use on the containers, the product information and the safety data sheet must be observed. Please also observe the cleaning and maintenance recommendations of the manufacturers as well as the instruction manual of the machines and equipment used.




Application method

Initial and re-oiling (impregnating) with Kiehl-Basic-OilX



Step 3: Devices for applying the oil

e.g.: waxer, oil roller, double-sided spatula

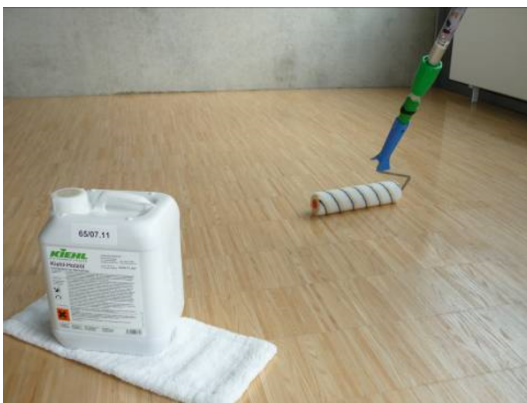

Step 4: Apply Kiehl-Basic-Oil

Pour approx. 250 ml of impregnating oil onto a surface of approx. 10 m² and immediately spread into a thin and even layer. Allow the product to react for a total of approx. 30 minutes. Any dry areas that appear during this time need to be moistened with the impregnating oil that is already on the surface; extra product can be added if required. Use the same tool that you used previously.



Step 5: Remove excess

Ensure that any Kiehl-Basic-Oil that has not penetrated the wooden surface after approx. 30 minutes is removed from the flooring!

Remove excesses with a solvent-resistant neoprene squeegee and absorb with a cleaning rag or cloth. Distribute product residue by wiping with a dry mop.



The safety advice and instructions for use on the containers, the product information and the safety data sheet must be observed. Please also observe the cleaning and maintenance recommendations of the manufacturers as well as the instruction manual of the machines and equipment used.



Application method

Initial and re-oiling (impregnating) with Kiehl-Basic-OilX



Step 6: Rub the surface dry and create the final surface finish

Once the excess impregnating oil has been removed, the remaining thin oil film should be rubbed dry using a rotary floor machine and a white polishing pad (Finish-Pad), until a paper towel can be pressed against the floor and lifted without any oil residue. Repeat Step 6 after 6 hours of drying.

Oxidation-drying oils in conjunction with wood dust, cloths, pads and other absorbent tools can lead to spontaneous combustion. These tools must therefore be soaked in water and disposed of in an airtight, sealed container. Observe local disposal regulations.



The safety advice and instructions for use on the containers, the product information and the safety data sheet must be observed. Please also observe the cleaning and maintenance recommendations of the manufacturers as well as the instruction manual of the machines and equipment used.